



KAISSA

Quick Users Guide

Rev 1.0



First of all, thanks for purchasing our new Kaissa chess clock. It has been designed under the Design for All guidelines, in order to achieve a totally accessible product.

KAISSA Works Under two main modes :

- PLAY MODE : Normal playing situation.
- PROGRAMMING MODE. Program playing parameters.

KAISSA needs 4*AA batteries to work. You'll find the battery holder at the bottom of the product.

PLAY MODE

When powering ON (ON-OFF switch is located at the bottom of the device), Kaissa enters automatically in PLAY MODE and GAME STOPPED.

KAISSA will show you the remaining TIME for each player. (The remaining time depends on the actual PLAYING MODE, see Programming Mode for more information).

START GAME	Push D Key to start the game.
STOP GAME	Push and hold 2 seconds the D key.
SPEAK PLAYER 1	Push A Key to listen your time.
	Push B Key to listen opponent time.
SPEAK PLAYER 2	Push F Key to listen your time.
	Push E Key to listen opponent time.
CURRENT PLAYER	Pushing the upper side Lever.

PROGRAMMING MODE

(Note : all the programming messages are sent via speech to player 1).

START PROGRAMMING MODE	When KAISSA is in GAME STOPPED mode , push and hold 2 seconds the C Key.
STOP PROGRAMMING MODE	When KAISSA is in PROGRAMMING MODE mode , push and hold 2 seconds the D Key.
GO TO NEXT PROGRAMMING PARAMETER	When KAISSA is in PROGRAMMING MODE mode , push C Key.
PROGRAMMING TIMES	With the Lever position, we control the player whose time is being modified. A and B Keys : move the cursor to the righth or to the left to select digits to change. E Key : decrement of the selected digit. F Key : increment of the selected digit.
PROGRAMMING MODES	Modes 0..7 fixed. No programmables. Modes programmables : 8..29. Lever at left position : change of Playing Mode (0..29) and first control time. (Hours and minutes). Lever at right position : Change of second control time (Hours and minutes) and movement bonus (seconds).
PROGRAMMING LANGUAGES	Lever at left position : A and B keys select the Player 1 language. Lever at right position : E and F keys select the Player 2 language.
PROGRAMMING VOLUME	Lever at left position : A and B keys select the Player 1 volume. Lever at right position : E and F keys select the Player 2 volume.
PROGRAMMING BUZZER	A Key : ON. B Key: OFF.
BATTERY STATUS	Shows the Battery status.

WARNING :

Use only 1.5V AA Batteries.

Take care of the batteries polarity when inserting new ones.

Don't leave the batteries on the device for long inactivity periods.

InDoor use.

Manufacturer : FUNDOSA ACCESIBILIDAD

Model : KAISSA